
 
 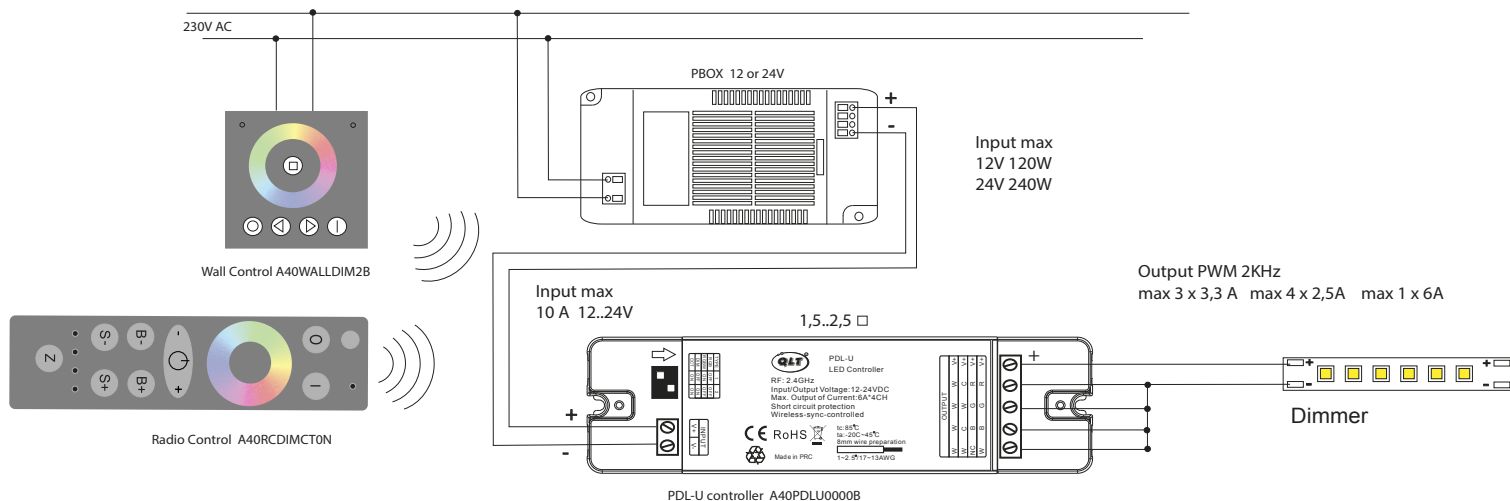


RUBAMP4

Paramétrage et connexions




TYPE	1	2
RGB	OFF	OFF
RGBW	ON	OFF
DIM	OFF	ON
CCT	ON	ON



Systeme de controle par radio fréquence

RUBCONT4

Paramétrage RGBW

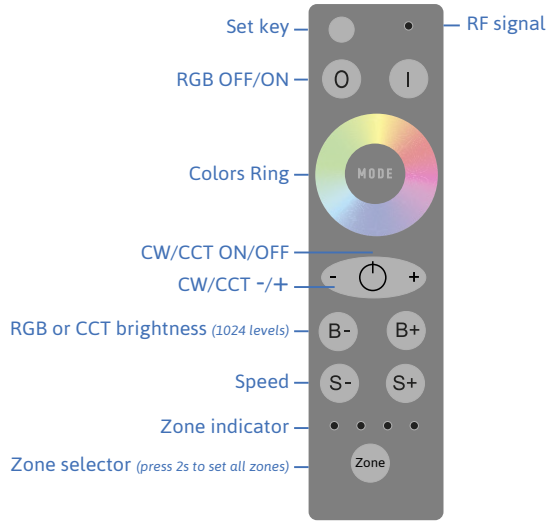

DYNAMIC MODE M BUTON

N°	PATTERNS	REMARKS
1	White breathe	Speed is adjustable, brightness is unadjustable
2	3 colors jumpy	
3	7 colors jumpy	
4	3 colors fade	
5	7 colors fade	
6	R/G cross fade	
7	R/B cross fade	
8	G/B cross fade	

NAME	DESCRIPTION
SET	Nonfunctional
I	RGB channels /Turn ON
O	RGB channels /Turn OFF
Colours Ring	Static color options, 64 colors in total
M	Dynamic modes, 8 modes in total
☉	CW (means: color white+ warm white) channels. Turn ON/OFF
-	Balance to warm white. Long-press can get fast adjusting
+	Balance to cool white. Long-press can get fast adjusting
B-	Brightness - for RGB/CCT statics colors. Long-press can get fast adjusting
B+	Brightness + for RGB/CCT statics colors. Long-press can get fast adjusting
S-	Speed down for dynamic mode. Long-press can get fast adjusting
S+	Speed up for dynamic mode. Long-press can get fast adjusting
Zone	Zone selection, 2 seconds long-press get "all-controls"

CODE LEARNING OPERATION BETWEEN TWO REMOTE CONTROLS, MORE REMOTE CONTROLS WITH THE SAME CODE

STEP	OPERATION	INSTRUCTIONS
1	A remote control: Press and hold "ON" on the remote control for 5 seconds. The indicator of the remote control will flash quickly, means it enters the pairing code transmission status	Will automatically exit code transmission status after 60 seconds or pressing any key to exit.
2	B remote control: long-press "MODE" key for 5 seconds. The remote indicator light changes from 100% light to off, means entering the code value receiving state.	Will automatically exit code value receiving state after 30 seconds or exit after learning the code value successfully.
3	See the B remote control indicator light flash 3 times.	Code copying is finished and exit code value receiving status.

COPY CODE FROM RECEIVER TO REMOTE CONTROL, IF YOU HAVE A NEW REMOTE CONTROLS AND THE OLD IS LOST


STEP	OPERATION	INSTRUCTIONS
1	Cute of the power receiver.	Wich one will be controlled by remote.
2	Long-press "MODE" key for 5 seconds. The remote indicator light change from 100% light to off, means entering the code value receiving state.	Will automatically exit the code value receiving state after 30 seconds or exit after learning the code value successfully.
3	Power on receiver, will see remote control indicator light flash 3 times.	Code copying is finished and exit code value receiving status.

RESTORE FACTORY SETTINGS

STEP	OPERATION	INSTRUCTIONS
1	Long-press "MODE" key for 20 seconds.	The remote indicator light dim down and flashes continuously until the 20th second and then back to 100% light. Means this step is finished.
2	Press the "OFF" to confirm. The remote indicator light flashes 3 times.	Restore factory settings successfully.

RUBCONT4

Paramétrage CCT/DIMM

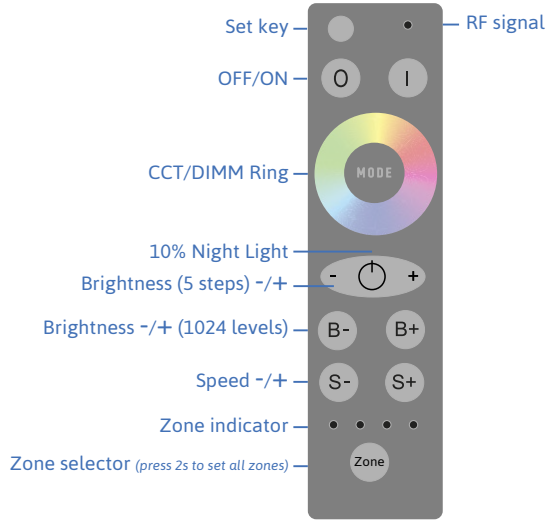

NAME	DESCRIPTION
SET	Nonfunctional
I	Turn ON
O	Turn OFF
CCT/DIMM Ring	Corresponding full range color temp. of the tunable LED from 100% CW to 100% WW
M	4 modes in total: all flash, 2 colors flash, all fade, 2 colors fade
☉	10% Night Light
-	Brightness - by 5 levels (10%, 30%, 50%, 70%, 100%)
+	Brightness + by 5 levels (10%, 30%, 50%, 70%, 100%)
B-	Brightness - by 1024 levels. Long-press can get fast adjusting
B+	Brightness + by 1024 levels. Long-press can get fast adjusting
S-	Speed down for dynamic mode (100 levels). Long-press can get fast adjusting
S+	Speed up for dynamic mode (100 levels). Long-press can get fast adjusting
Zone	Zone selection, 2 seconds long-press get "all-controls"

CODE PAIRING OPERATION. BE SURE ONLY THE DEVICE TO MATCH IS SWITCHED ON

STEP	OPERATION	INSTRUCTIONS
1	Connecting the load to the receiver and power it	1 - It is necessary to clear the code first, if the receiver W as coded before. 2 - Batch operation can be performed within the remote control range.
2	Select area	Select the area with the "Zone" key and the corresponding indicators lights up.
3	Press and hold "ON" the remote control for 5 seconds. The indicator of the remote control will flash quickly, means it enters the pairing code transmission status.	Will automatically exit code transmission status after 60 seconds or pressing any key to exit.
4	See the load light flashes 3 times and return to the initial state	Pairing coding is finished successfully

CODE CLEARING OPERATION

STEP	OPERATION	INSTRUCTIONS
1	Connecting the load to the receiver and power on it	1 - The clearing operation should be finished within 1 minute after the receiver is powered on. If exceeds the time, can be powered on again 2 - Batch operation can be performed within the remote control range.
2	Press and hold the remote control "OFF" for 5 seconds. The indicator of the remote control will flash quickly, means it enters the clearing code transmission status. There is no need to select the corresponding area when clearing code.	1 - Will automatically exit code transmission status after 60 seconds or pressing any key to exit. 2 - If the original remote control is lost, the new remote control can be used for clearing operations.
3	See the load light flashes 3 times and return to the initial state.	Clearing coding is finished successfully.