

DYNAMIC MODE M BUTON

N°	PATTERNS	REMARKS
1	White breathe	Speed is adjustable, brightness is unadjustable
2	3 colors jumpy	
3	7 colors jumpy	
4	3 colors fade	
5	7 colors fade	
6	R/G cross fade	
7	R/B cross fade	
8	G/B cross fade	

NAME	DESCRIPTION
SET	Nonfunctional
I	RGB channels /Turn ON
O	RGB channels /Turn OFF
Colours Ring	Static color options, 64 colors in total
M	Dynamic modes, 8 modes in total
Ⓞ	CW (means: color white+ warm white) channels. Turn ON/OFF
-	Balance to warm white. Long-press can get fast adjusting
+	Balance to cool white. Long-press can get fast adjusting
B-	Brightness - for RGB/CCT statics colors. Long-press can get fast adjusting
B+	Brightness + for RGB/CCT statics colors. Long-press can get fast adjusting
S-	Speed down for dynamic mode. Long-press can get fast adjusting
S+	Speed up for dynamic mode. Long-press can get fast adjusting
Zone	Zone selection, 2 seconds long-press get "all-controls"



CODE LEARNING OPERATION BETWEEN TWO REMOTE CONTROLS, MORE REMOTE CONTROLS WITH THE SAME CODE

OPERATION	INSTRUCTIONS	
1	A remote control: Press and hold "ON" on the remote control for 5 seconds. The indicator of the remote control will flash quickly, means it enters the pairing code transmission status	Will automatically exit code transmission status after 60 seconds or pressing any key to exit.
2	B remote control: long-press "MODE" key for 5 seconds. The remote indicator light changes from 100% light to off, means entering the code value receiving state.	Will automatically exit code value receiving state after 30 seconds or exit after learning the code value successfully.
3	See the B remote control indicator light flash 3 times.	Code copying is finished and exit code value receiving status.

COPY CODE FROM RECEIVER TO REMOTE CONTROL, IF YOU HAVE A NEW REMOTE CONTROLS AND THE OLD IS LOST

OPERATION	INSTRUCTIONS	
1	Cute of the power receiver.	Wich one will be controlled by remote.
2	Long-press "MODE" key for 5 seconds. The remote indicator light change from 100% light to off, means entering the code value receiving state.	Will automatically exit the code value receiving state after 30 seconds or exit after learning the code value successfully.
3	Power on receiver, will see remote control indicator light flash 3 times.	Code copying is finished and exit code value receiving status.

RESTORE FACTORY SETTINGS

OPERATION	INSTRUCTIONS	
1	Long-press "MODE" key for 20 seconds.	The remote indicator light dim down and flashes continuously until the 20th second and then back to 100% light. Means this step is finished.
2	Press the "OFF" to confirm. The remote indicator light flashes 3 times.	Restore factory settings successfully.

# RUBCONT4

## Paramétrage RGBW